

Parts included with each Bag Filter Kit:

- A. Gasket, 2 each
- B. P-clips, 4 each
- C. Metal filter tabs, 4 each
- D. Nylock nuts for tabs, 4 each

1. Completely slide 4 P-clips (B) on both housing side rails, spaced 7" (18cm) from top and bottom edges as shown.




2. Rotate each P-clip 90° so that the "P" is parallel to the side rail.



3. Peel back approximately 1" of the backing on the gasket strip (A). Butt the end to the already installed gasket. By *peeling and pressing*, install the gasket over the P-clip mounting shoe and along the entire length of the rail on each rail.



4. Install bag filter housing into Air Scrubber; Push in firmly against the flange. Secure with metal tabs (C) and nylock nuts (D), 4 each.

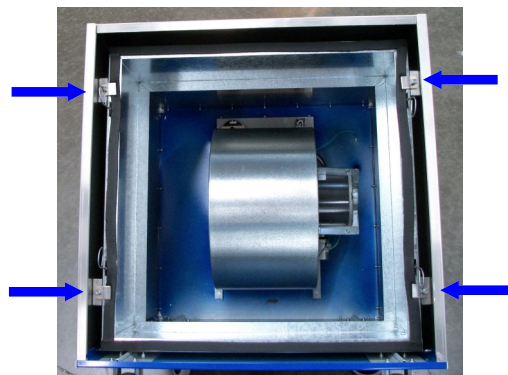

5. Install **bag filter** into **housing** with bags toward the inside, keeping bags vertical to unit. Tuck filter bags carefully into the housing at top and bottom to keep them from being creased between housing and filter frame.

6. Secure bag filter in place by rotating P-clips 90° over filter frame.

