



OmniAire Negative Air / HEPA Air Filtration Machines

OmniAire 1000 Series Operation and Maintenance Manual



WARNING

SAFETY WARNING INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

This equipment to be operated only by trained personnel.



Do not use near combustible or explosive material. Fire may occur.



Do not operate if cord or plug is damaged. Contact a authorized service facility for examination and/or repair.



Do not expose to water or rain. Electrical shock may occur.



Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic areas and where it is not a tripping hazard.



Connect only to grounded outlet with GFCI device.



Disconnect power for cleaning and servicing.



Disconnect power cord before moving.

L' AVERTISSEMENT

INSTRUCTIONS D'AVERTISSEMENT DE SÉCURITÉ

LIRE ET CONSERVER CES INSTRUCTIONS

Cet équipement ne doit être utilisé qu'après avoir lu les instructions.



Ne pas utiliser à proximité de matériaux combustibles ou explosifs. Un incendie peut se produire.



Ne pas utiliser si le cordon ou la fiche est endommagé. Contactez un centre de service autorisé pour examen et / ou réparation.



Ne pas exposer à l'eau ou à la pluie. Un choc électrique peut se produire.



Ne pas passer le cordon sous un tapis. Ne pas couvrir le cordon avec des carpettes, les coureurs, ou revêtements simili- laires. Éloigner le cordon des endroits passants et où il n'est pas un risque de déclenchement.



Connecter uniquement à une prise mise à la terre.



Débranchez l'alimentation pour le nettoyage et l'entretien.



Débranchez le cordon d'alimentation avant de vous déplacer.



CONFORMS TO UL STD 507
CERTIFIED TO CAN/CSA STD
C22.2 NO. 113-M1984

Table of Contents

Introduction.....	Pg. 04
Application Examples.....	Pg. 04
Operations.....	Pg. 05
Maintenance.....	Pg. 06
Troubleshooting.....	Pg. 07
Product Specs.....	Pg. 08
Parts and Accessories.....	Pg. 08
Omni CleanAir Limited Warranty.....	Pg. 09


Introduction

The OmniAire Negative Air Machine series provides high-performance negative air scrubbing through a variety of performance and feature options. These machines are used for the removal of toxic mold, asbestos, and lead dust during renovation and abatement projects, and for purifying air in commercial, factory sites, and medical facilities. These machines are made out of a strong aircraft-grade aluminum housing with smooth surfaces, for easy sanitation. It can be used with multiple filter options such as HEPA's, Activated Carbon plus primary/secondary filter. Additional options include power coated housing and audio alarm. Additional accessories include an intake manifold, flex ducting, and quick clamps.

Application Examples

Creating Negative Air Pressure

To create negative pressure inside the containment area, more air has to be exhausted out than leaks into the containment. Negative air may be required for a workflow (asbestos abatement for example). Place the machine inside the containment and hook a flexible duct to the outlet ring of the machine exhausting to outside the containment. In this case, all contaminated air is contained inside the negative air pressure space. Alternatively, the machine can be outside the containment space, using a duct and an intake manifold.

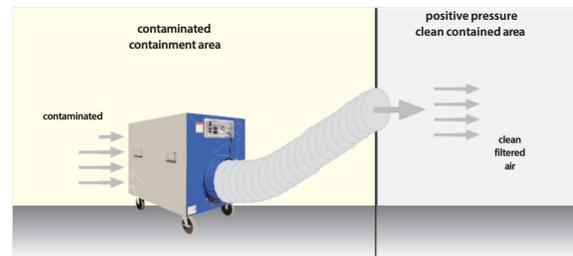

Creating Positive Air Pressure

An alternate workflow is to create positive air pressure in the containment area, which ensures that treated air is pumped into the containment area.

Carbon Activated Filtering

For VOCs and odor control, an OdorGuard carbon activated filter can be quickly installed. Activated carbon filters are designed to remove odors and gaseous pollutants from air. These filters are an effective and quick solution to your VOCs and odor problems.

Operations


Your OmniAire unit will run 24x7 continuously for years with proper preventative maintenance and prompt replacement of the proper filters. Even when the HEPA filter is fully loaded, the filter is still removing particulates from the air at the rated efficiency yet at a reduced airflow. This will affect the ability of the machine to provide positive or negative pressure within the containment. When the unit's HEPA filter is nearing full capacity, the "change filter" light on the front panel will turn on. At this time you should replace the HEPA filter so that you can maintain the airflow needed.

Prior to operating the machine, always check that the HEPA filter is securely in place. Tighten filter tabs if necessary. The HEPA filter is secured with four filter tabs as shown in the photo. It is critical that the HEPA seal is in place to ensure all air passes through the HEPA. These tabs are secured with 1/4-20 Nylock nuts, which require a 7/16" wrench or socket.

Do not operate the unit without a HEPA filter in place.



Refer to the figure below for location and description of controls available for each of the three models. To operate the machine, turn the dial from Off to the desired speed (Pro model), or flip the switch to the High or Low speed (Prime and Plus models).

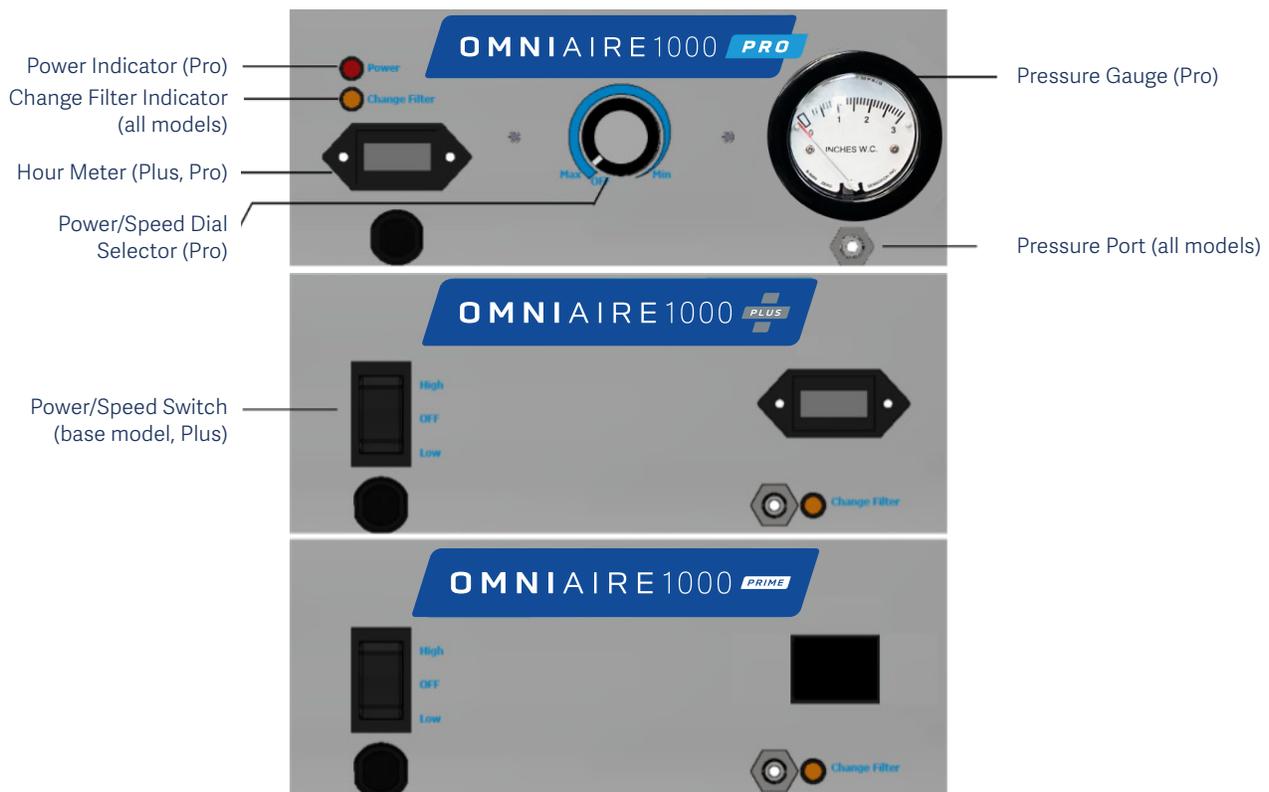

Maintenance

Preventative Maintenance

The motor and blower do not require maintenance and your OmniAire machine will run for years with proper regular replacement of the filters. In addition, the unit's power cord should be inspected for cuts or other damage on a regular basis.

Prefilter Replacement

The primary/secondary filter should be changed when the orange side shows it is loaded with dust. Changing the filter can be done while the machine is running. Ensure that the orange side of the prefilter is facing the HEPA filter.

HEPA Filter Replacement

During your projects, your HEPA filter purifies the air and gradually becomes loaded with sub-micron particulates. Even when the HEPA filter is fully loaded, the filter is still removing particulates from the air at the rated efficiency yet at a reduced airflow. This will affect the ability of the machine to provide positive or negative pressure within the containment.

To replace the HEPA filter unplug the machine and remove the screen/manifold to remove the prefilter. You will see 4 filter tabs holding the HEPA filter in place (see photo above). These tabs are secured with 1/4-20 Nylock nuts, which require a 7/16" wrench or socket.

Remove all 4 filter tab retaining nuts and remove the filter tabs and set aside. Slide the HEPA filter out along the filter guides and remove it from the machine. ALWAYS TREAT THE USED HEPA FILTER AS HAZMAT AND PROCESS IT ACCORDING TO YOUR ESTABLISHED HAZMAT PROCEDURES.

To replace the HEPA filter ensure that the gasket on the HEPA filter faces inwards toward the flange, slide the filter in place along the filter guides and re-install the filter tabs and filter tab securing nuts. The nuts should initially be tightened to where the stud is flush with the end of the nut. This will compress the gasket on the filter approximately 1/2 of the thickness. This allows for the filter to be reseated and tightened at a later time if necessary.

Troubleshooting

Your OmniAire Negative Pressure Machine is designed and manufactured to provide years of trouble-free performance. If there is a problem, please reach out for technical support and we are happy to help.

The machine does not start

1. Check that the unit is plugged in and there is 115VAC (or 230VAC) available. On the **Pro** model, when selecting a speed the red indicator light should come on. On the **Prime** and **Plus** models, select either LOW or HIGH speed to turn on the unit.
2. Contact Omni CleanAir technical support to troubleshoot further.

The machine just hums when turned on

1. Unplug the unit.
2. Remove the HEPA filter and push the blower wheel by hand. If it does not move freely or if you hear a grinding/scrapping noise as you spin it, then the blower wheel is touching the side of the blower housing. This may be due to an impact of some kind and the motor mounts have been bent. Remove the motor/blower assembly and replace the bent motor mounts.
3. If the blower spins freely, check the capacitor. With the HEPA filter still removed from the machine, ensure that the wiring connected to the capacitor is plugged in and not broken. Re-plug the unit into the power outlet keeping the switch in the OFF position. Then push the blower wheel, remove your arm, and as it is spinning turn the speed selector switch to LOW. **[ENSURE NO CLOTHING OR HAIR IS CLOSE TO THE MOTOR.]** If the machine keeps running, the capacitor needs to be replaced.

The machine will run for a few minutes then turn off

1. The machine must have a HEPA filter (or bag filter or Vapor Trap filter) installed to operate properly. If you are trying to run it without a filter in place, the motor will overheat within a few minutes and the thermal overload will engage and shut it down. Let the motor cool off for 30 minutes, install the filter and try running the machine again.
2. If the filter is in place and the machine still shuts off after a few minutes then the motor is faulty. Replace the motor.

The machine vibrates excessively when running

1. This is an indication that the motor bearings are worn out. If the machine continues running, at this point the vibration will cause the center hub of the blower wheel to separate from the wheel requiring replacement of both the motor and blower. Replace the motor. Wiring diagram can be provided.

Available Models

OA1000 PRIME, OA1000 PLUS, OA1000 PLUS-A, OA1000 PRO, OA1000 PRO-P

Parts and Accessories

Family	OA1000
Plus Model	OA1000 PLUS
Pro Model	OA1000 PRO
HEPA Filter 6" depth 99.97%	OAH1616-6
HEPA Filter 12" depth 99.7%	OAH1616
HEPA Filter 12" depth 99.99%	OAH1616G
HEPA Filter 12" depth 99.99%, High Capacity	OAH1616G-HC
Prefilter (box of 20)	OAP1818
OdorGuard 600 Carbon Filter	OG1616
Intake Manifold Kit 10" (Manifold, clamp, duct)	OAIM1000-10KIT
ABS Plastic Intake Manifold, 10" Dia.	OAIM10
Quick Clamp, 8"-10" Dia. Flexible Duct, 10" Dia. x 25' L	QCW12
8"-10" Dia. Flexible Duct, 10" Dia. x 25' L	OAD10
Flexible Duct, 10" Dia. x 25' L, Wire & Fiber Reinforced	OAD10R

Product Specifications

Family	OA1000
CFM TrueCFM™ - Prime Model	300 CFM to 1000 CFM based on speed settings and filter selection
CFM TrueCFM™ - Plus Model	
CFM TrueCFM™ - Pro Model	
Noise (6 foot distance)	68b - 72 db
Weight (lbs)	96
Power Consumption (115 VAC)	115VAC/60Hz/4.4A
Power Consumption (230 VAC)	230VAC/50-60Hz/ 2.4A
Size	19"W x 23"H x 31.5" L

Omni CleanAir Limited Warranty

This warranty policy covers equipment (machines and accessories) sold by Omni CleanAir and applies to the OmniClean, OmniTec, and AgriAir portfolio of brands.

Omni CleanAir warrants that our products are free from defects in workmanship and materials under normal use during the warranty period.

All OmniClean machines including the OCA500, 1200, and 1500 series, excluding consumables come with a standard two (2) year warranty. All OmniTec and AgriAir machines excluding consumables come with a standard one (1) year warranty. Warranty covers parts and labor only, excluding consumables. Consumables (HEPA filters, prefilters, carbon filters, and UV light bulbs) carry no warranty other than to be free of defects upon arrival. Non-Consumable accessories come with a standard ninety (90) day warranty.

The warranty extends to the following parties:

- Customers (individuals or companies) to whom Omni CleanAir directly sells products covered by this policy.
- Customers (both individuals and companies) who purchase Omni CleanAir products from an authorized distributor or reseller.

This limited warranty is not transferable or assignable to any subsequent purchaser and is only applicable in the country where the product was originally purchased.

The following circumstances are not covered by this warranty policy:

- Damage caused by an act of nature such as flood, fire, wind, earthquake, or lightning.
- Damaged caused during shipping or an impact event with other objects.
- Damaged caused by improper care or negligence.
- Damaged cause by misuse, abuse, mishandling, or misapplication.
- Damaged caused by alteration or adjustments by unauthorized personnel.

Under no circumstances shall Omni CleanAir or any supplier of Omni CleanAir be liable for any loss, damage or expense, including, but not limited to, loss or damage arising out of the failure of the products to operate for any period of time, inconvenience, the use of rental or replacement equipment, loss of profits or other economic loss, or general, direct, special, indirect, incidental or consequential damages or property damages.

Many states and localities have their own varied codes and regulations governing sales, construction, installation, and/or use of Equipment for certain purposes. While Omni CleanAir attempts to assure that its Equipment comply with such codes, it cannot guarantee compliance, and cannot be responsible how Equipment is installed or used. Omni CleanAir recommends that, before purchasing and using Equipment purchasers review the Equipment application, and federal, state and local regulations, to be sure that the Equipment installation and use will comply with them.

Omni CleanAir offers extended warranty through the GOLD CARE MEMBERSHIP PROGRAM, for as long as membership status is maintained.

For more information please visit omnicleanair.com/resources/gold-care-membership

To Submit a Warranty Claim or Receive Technical Support

Contact our Technical Support Department at 425 512 0379 or by email at support@omnicleanair.com. Hours are Monday-Friday 7:30am-4:00pm PST. Please have the product model name and serial number available, along with the purchase date and invoice number, if applicable. Our service technicians will work with you to diagnose your technical issue and recommend a suitable course of action to solve your problems quickly and to your satisfaction.

If it is determined that your product is defective and under warranty, OmniClean will repair or replace, at our discretion, any faulty parts or equipment. A Return Merchandise Authorization (RMA) will be issued for the defective product.

Customer to arrange and ship the product to Omni CleanAir at the customer's expense and must use original packaging. For units that have failed within 30 days, Omni CleanAir will pay the cost of return shipping from the customer's site. If Omni CleanAir determines that the Warranty Claim is valid, Omni CleanAir will be responsible for shipping the repaired product to the customer upon completion of any repairs or replacements.

In instances where equipment is damaged in transit wither while being returned to Omni CleanAir or after repairs have been completed, Omni CleanAir and the customer will need to work together to resolve these situations with the freight carrier(s) involved.

- If a shipment is made on the customer's account with a third party freight carrier, the customer is responsible for filing any claim for reimbursement and will be responsible for any associated repairs or the replacement of the Equipment is in question.
- If a shipment is made on the Omni CleanAir's account with a third party freight carrier, and the equipment arrives at the customer's location clearly damaged, it is the responsibility of the Customer to reject the freight carriers delivery. If the customer accepts the shipment and determines after the fact that the equipment was damaged during shipment, the customer is responsible to provide photos, an inspection report, and any other information to Omni CleanAir within 14 days, in order for Omni CleanAir to file a claim with the third party freight carrier. Once the claim has been filed Omni CleanAir will work with the customer to address the damage incurred.